




REF: Fab-Form ICF Butt w Zee installation 2" x 4" (on flat) 18" O.C. vertically with additional bracing as required near bottom

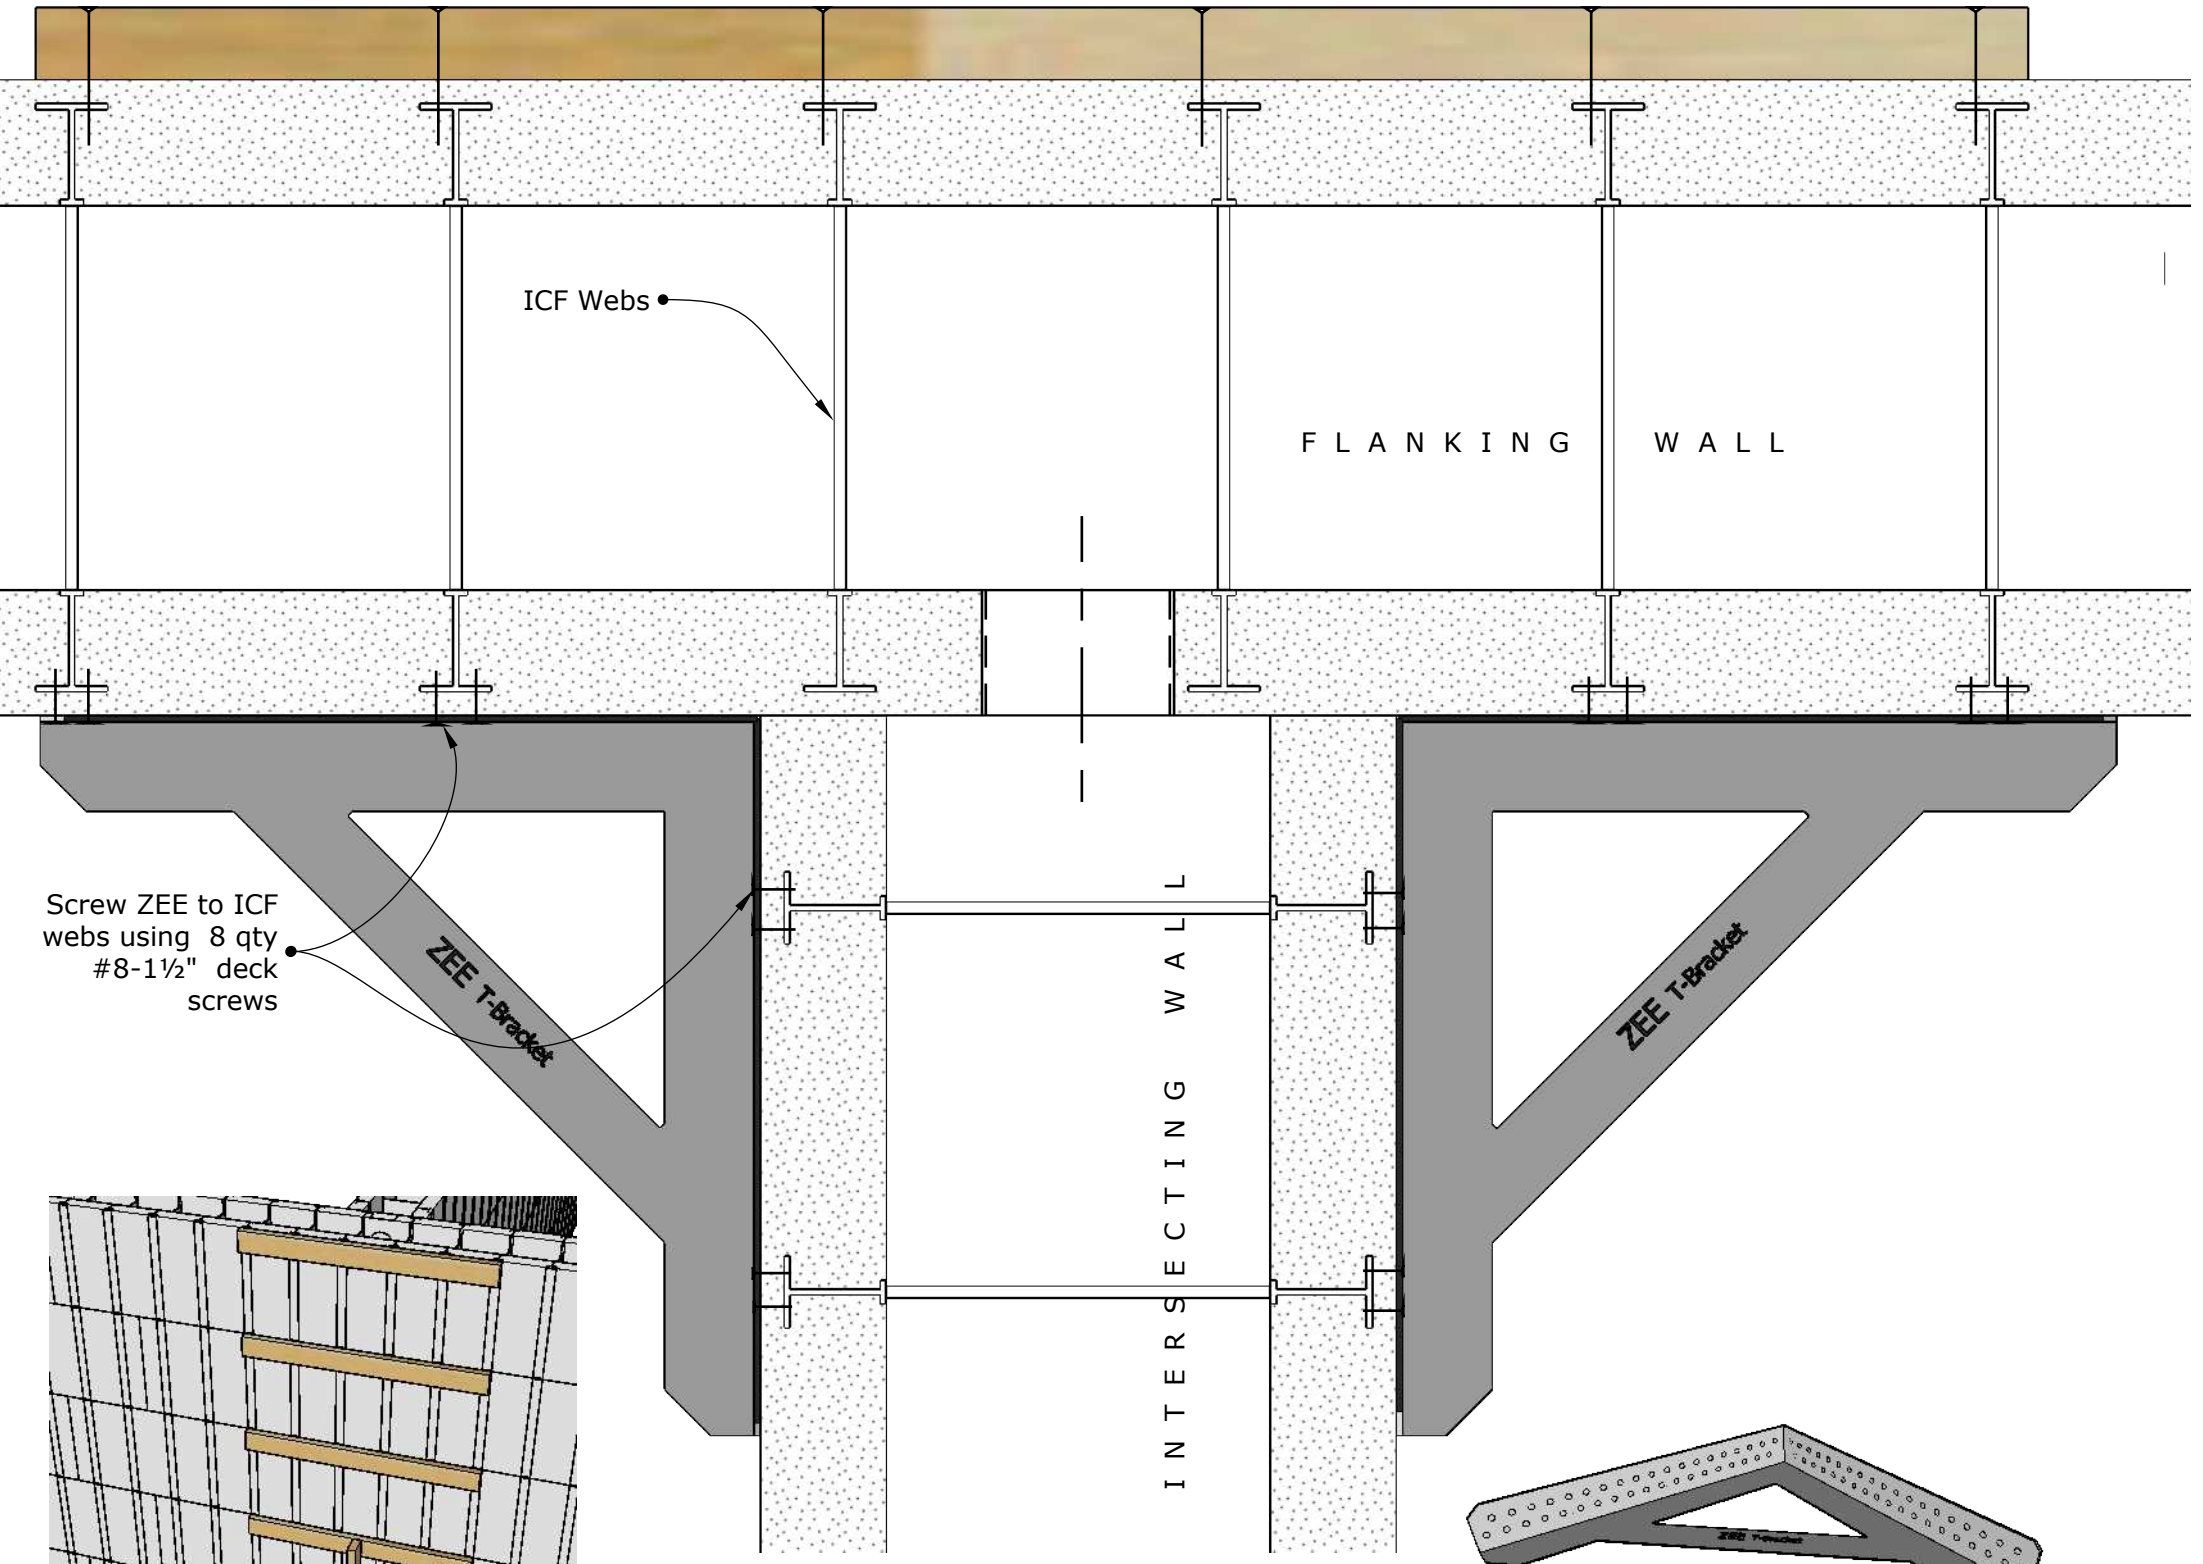


Plan View

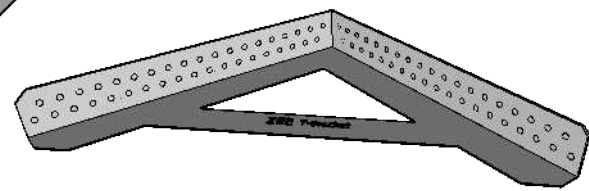


ZEE Bracket

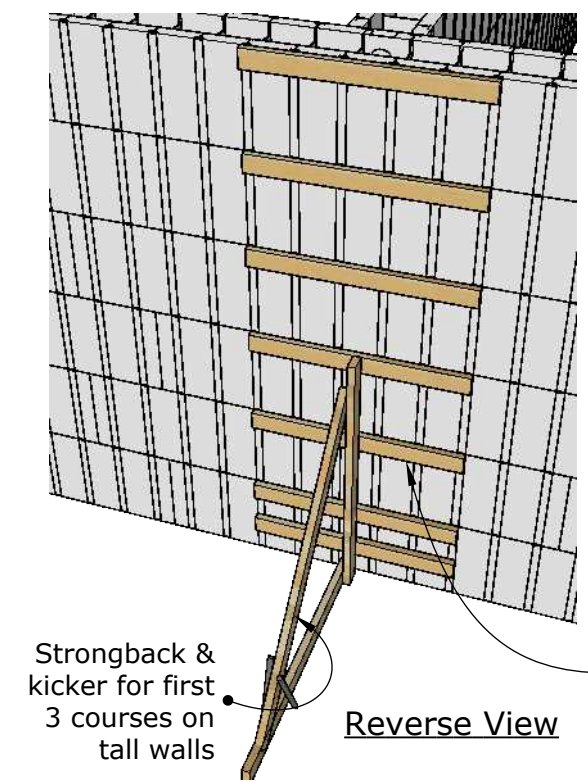

Reverse View

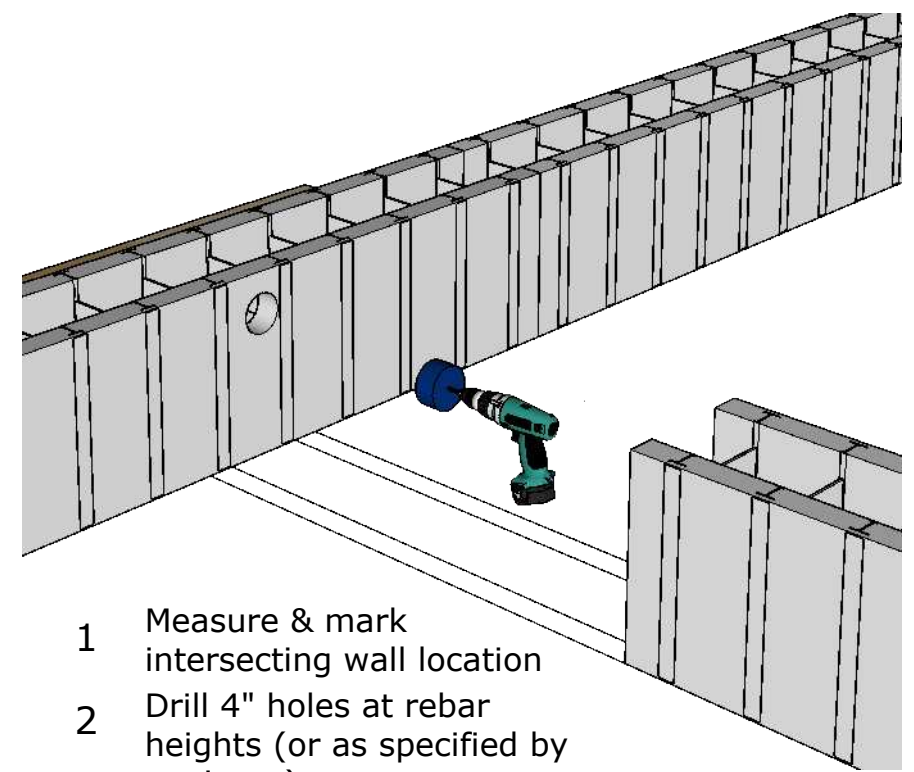

- 1 Measure & mark intersecting wall location
- 2 Drill 4" holes at rebar heights (or as specified by engineer)

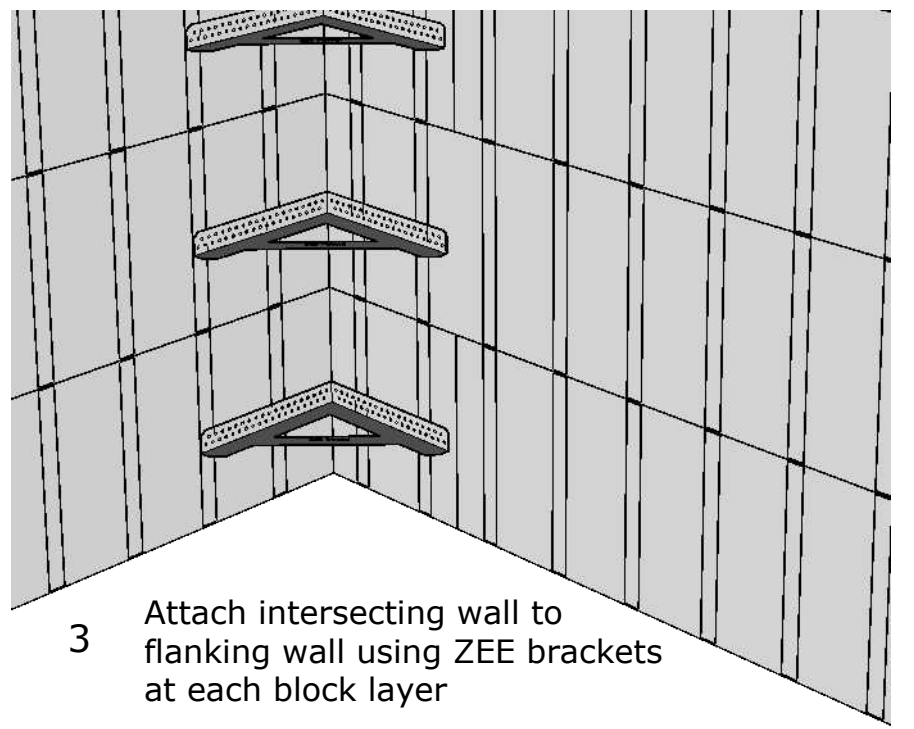

- 3 Attach intersecting wall to flanking wall using ZEE brackets at each block layer

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FAB-FORM INDUSTRIES LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF FAB-FORM INDUSTRIES IS PROHIBITED

FAB-FORM INDUSTRIES LTD.

www.fab-form.com (888)303-3278

DRAWN: SFRG	CHECKED: RF	APPROVED: JF
DO NOT SCALE DRAWING	WEIGHT:	DATE:

TITLE:
ZEE T-bracket

DRG NO: Installation	REV:
-------------------------	------